



***Ampeg***<sup>®</sup>

Knowledgebase

## Micro VR Audio In

---

**Question: When I plug into the Audio In jack on the front of my amp, why can't I hear it through my speakers?**

Answer: The audio going into the Audio In jack is routed directly to the Headphones jack, meaning it can ONLY be heard through the headphones and NOT your speaker.